




TV Hanging Tech Sheet

This document provides general guidelines for mounting a TV and accessories using the E-Z Anchor® Drywall Toggle Anchor product. If you're not sure about the appropriateness of your application, please consult with a licensed contractor or engineer.


TV mount installation must be done in accordance with the following requirements:

- This product is suitable only for mounting of TVs under 40 lbs.
- **Do not use for TVs and accessories (soundbar, etc.) that weigh more than 40 lbs. combined.**
- Install into drywall that is at least ½" in thickness and conforms to ASTM C1396.
- Front of mounted TV and accessories must be no further than 6" from wall.
- Use a minimum of 4 anchors, appropriately spaced such that the load is evenly distributed across all anchors, use additional anchors if required by TV mount manufacturer. Usage of additional anchors does not equate to additional load capacity.
- Use with fixed mounts only. Do not use with a moveable (extending, tilting, or pivoting) TV mounts.
- Use with mounts that allow ample space for anchors to be installed properly.
- This application is not suitable for any live loads or movement of any sort.
- When installing the mount make sure that a wall stud is between the two left anchors and two right anchoring locations.


See supplementary installation video at www.easyanchors.com

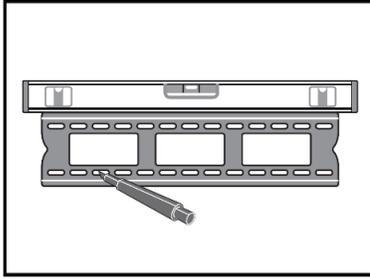


1. Mark anchor locations according to the TV Mount manufacturer's instructions. Ensure the mount is level when marking out anchor locations, and holes are an equal distance from the center to allow even weight distribution.

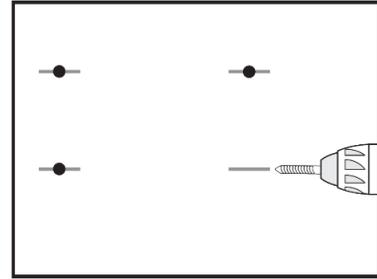


2. At each marked location, drill a 1/2" diameter hole.

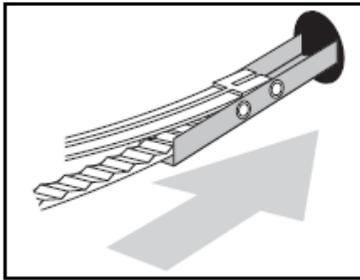


3. Fold the metal toggle against the plastic strap and insert it through the drilled hole.

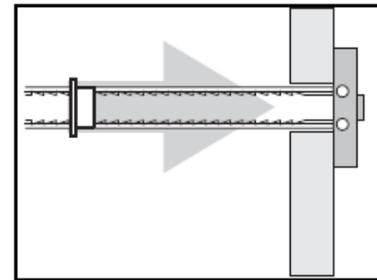

4. Pull end of straps away from wall until toggle sits flush against the back of your wall.
5. Slide plastic cap towards wall until the cap is snug against the surface of the wall.

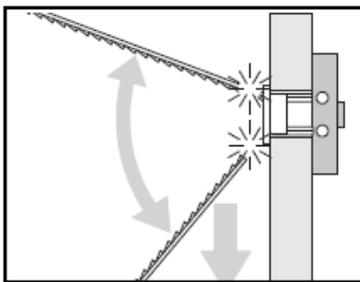

6. Gently separate straps and bend straps away from one another at the point where the strap meets the cap. Do not wiggle straps or break in same direction. Broken straps can be discarded.

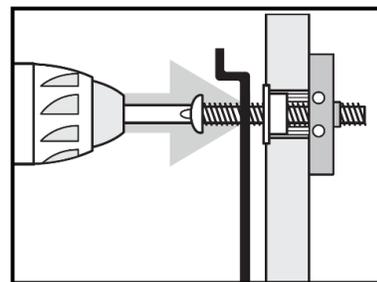

7. Once all the anchors are installed, place TV mount against installed flanges, insert bolt, and tighten against TV Mount. Ensure bolt length is at least 1/2" longer than the combined thickness of your TV Mount and wall.

8. Once the mount is secure, check to make sure the bracket was installed level. Install the remaining parts of the mount to the TV according to TV Mount Manufacturer's instructions. Hang the TV such that it is centered on the bracket and between the two anchors.